# UR110/115 125kHz RFID Reader

RS232, Wiegand and ABA TK2 OUTPUT with Remote L/O

### INTRODUCTION

The UR110 brings the concept of "Your Reader" which is a stylish, reliable proximity RFID reader with piano finish housing which really shows seamless integration to an intelligent building. For those high end projects, UR110 fulfils its requirement in both excellent performance and flexible appearance, such as changeable housing with customized logo, LED colors or even the buzzer sound which are all configurable to meet wide range of applications in Access control area or Home automation area. With waterproof design, it also serves as a great outdoor reader in all environment.





**UR115-00** 

UR110-00

### **FEATURES**

- EM Card 125KHz Read only
- Pre-programmable 3 in 1 interface outputs according to ABA TK2, RS232( UART) or Wiegand characteristics.
- Weather resistant
- Available installed on metal surface
- Reading distance: up to 9 cm
- New stylish housing to match modern construction for customer design
- 2ch Digital output can direct to drive Door Lock and Alarm .
- 2ch Digital input for Door Sensor and Door Open Switch with optical coupler to improve noise immunity

### SPECIFICATIONS

### **OPERATING**

Transmit Frequency	125KHz standard
Transponder	H4001 / H4002 / EM4100/4102 EM Card Read only
Reading distance	Up to 9 cm with EM card.
Interface	Wiegand, MSR ABA Track2 or RS232

### **ELECTRICAL**

Power Input	7.5 to 12 VDC. Linear supply recommended.
Current Requirements	90 mA @12VDC
Digital Output	Strike Max. Voltage : DC 50 VDC Strike Max. Current : 4.0A (Drain 2.0A Current-Continuous) Strike Time : 3 - 254 seconds (Toggle Mode) Strike Mode : Toggle/Latch ( Open Drain )
Digital Input	Optical Coupler isolation Input Voltage: DC 7.5~12 VDC


### **MECHANICAL**


Dimensions	Length: 100 mm / Width: 32 mm / Height: 16.5 mm for UR110 Series Length: 87 mm / Width: 32 mm / Height: 16.5 mm for UR115 Series
Weight	50 gm (Without Cable)
Cable Length	15 cm +/- 1cm

### **ENVIRONMENTAL**

Temperature	Operating : 0 °C to 55 °C Storage : -10 °C to 65 °C
Humidity	Operating : 10 % to 90 % noncondensing Storage : Up to 100% noncondensing

### ■ TERMINAL / INDICATOR DESCRIPTIONS

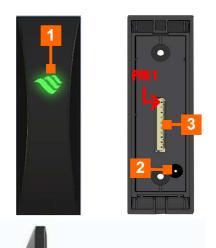

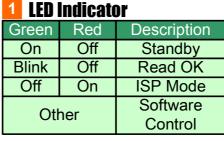


2 Sound Indicator									
Buzzer	Description								
Bi-	Read OK								
Other	Software Control								

### **3** 9 Pin Terminal

Pin	Color	Signal	In/Out	Description
1	Red	VCC	Р	Power 7.5-12 Volts
2	Black	GND	Р	Power Ground
3	Gray	D/O 1	0	Digital output 1 (open drain)
4	Blue	D/O 2	0	Digital output 2 (open drain)
5	Green	TX	I/O	RS232 TX (transmit), Magstripe
	Gibbii	1.	2)	Data & Wiegand Data 0
6	White	RX	I/O	RS232 RX (receive), Magstripe
	VVIIILE	IXX	1/0	Clock & Wiegand Data 1
7	Orange	CP	I/O	Card Present Output
8	Brown	D/I 1	I	Digital input 1 (active high)
9	Purple	D/I 2		Digital input 2 (active high)
10	Yellow	SEL	I/O	Program In/out

Pin5,6,7 output with internal 2K pull up

## **CONNECTION**

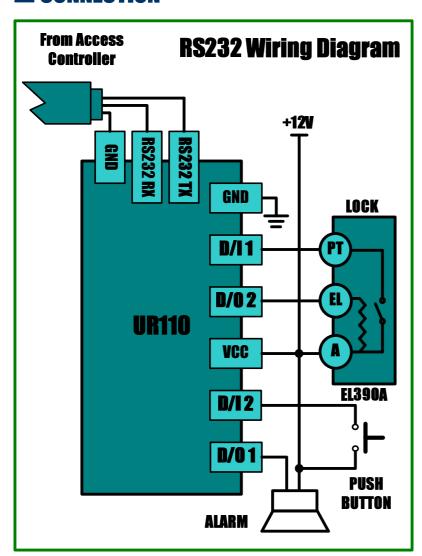

### **Data Structure for RS232**

Host to UR110 (RS232 only)

STX "J" "n" CR

Baud Rate: 19200,N,8,1

"n"	Description
5	Treble Single Beep
6	Treble Triple Beep
7	Mediant Single Beep
8	Mediant Triple Beep
9	Bass Single Beep
Α	Bass Triple Beep
В	D/O 1 On
С	D/O 1 Off
D	D/O 2 On
E	D/O 2 Off
F	* D/O 1 Momentarily On
G	* D/O 2 Momentarily On

- \* Momentarily Time default 5 seconds.
- \* This Value is changed by the URKit

STX: 0x02 CR: 0x0D


[Ex.] D/O 1 On:

Host

STX "J" "B" CR

Device

STX "A" CR

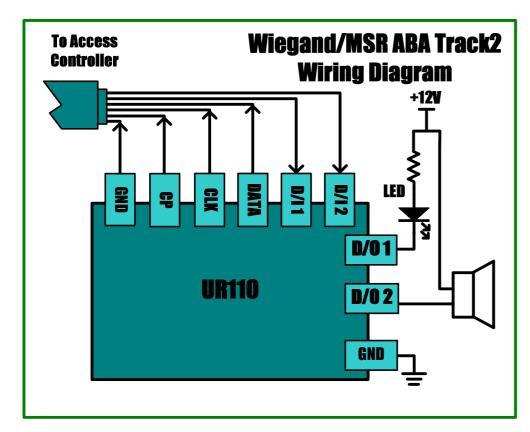

## Data Structure for Wiegand /ABA TK2

### Host to UR110

UR110 sends the reading ID to the host through Wiegand and MSR ABA Track2 interface. This is a signal direction communication protocol.

The Host (Access Controller) can control UR110 by the D/I1 or D/I2 Digital Input Ports.


The D/O1 or D/O2 Digital Output ports, UR110 may send out a signal for external device control.

## Utility Tool

URkit is the Utility tool for UR series reader. With its software(URkit Configure), URkit may perform complete functionalities of UR series reader.



URKIT is an optional device for UR110's configuration, please contact sales for inquiry

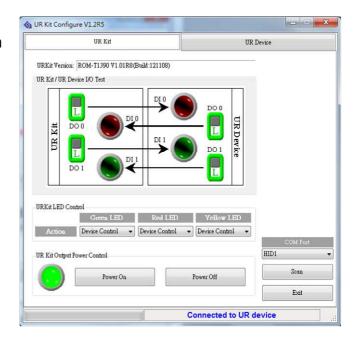

## **■ INTERFACE SELECT**

The output format can be customer programmed . The available formats are Wiegand , Magnetic Emulation and Serial ASCII (RS232)

	PIN	Wiegand	Magstripe	Serial ASCII (RS232)			
1	Red	Power 7.5-12V					
2	Black	Ground 0V					
6	White	Data 1	Clock (Strobe)	No Connection			
5	Green	Data 0	Data	TX Data			
7	Orange	No Connection	Card Present	No Connection			
10	*Yellow	Connect to White	Connect to Orange	No Connection			

\* It will enter ISP mode for Update Firmware when yellow connect to ground before power on.

### **OUTPUT FORMAT**

## **Data Structure (Serial ASCII)**

Baud Rate: 19200, N, 8, 1

STX(02 HEX) DATA( 10 HEX CHARACTERS ) CR LF CRLFETX(03 HEX)

The start character is factory defined as an 'STX' (02 HEX). This is followed by 10 Hex characters of data. The CR\LF characters serve to bring the received screen text back to the left hand side and on the line below after the data bytes have been sent. The 'ETX' (03 HEX) character denotes the end of the current transmission.

## Data Structure (Magstripe Emulation, ABA Track 2)

Speed: Simulated to 40 IPS (Inch per Second)

10 LEADING ZEROS SS DATA (14 DIGITS) ES LRC 10 TRAILING ZEROS

The 10 leading zeros prepare the receiving unit to accept the data. The data is 14 digits long. SS is the Start Sentinel consisting of 11010.ES is the End Sentinel consisting of 1111.LRC is the Longitudinal Redundancy Check character. Lastly there are 10 trailing zeros. Magstripe 8 digits and 6 digits are available for special request.

The hexadecimal data from the card is first converted to a denary string before transmission. For example, a card containing the hexadecimal data (60ABE67A88), will be converted to denary and sent as denary 00415200869000(14 digits)

The calculation is performed as follows.

 $(8*16^{\circ}+8*16^{\circ}+10*16^{\circ}+7*16^{\circ}+6*16^{\circ}+14*16^{\circ}+11*16^{\circ}+10*16^{\circ}+0*16^{\circ}+6*16^{\circ})$ =415200869000

## Data Structure (Wiegand Format-26 Bit)

0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25
Р	S	S	S	S	S	S	S	S	C	C	C	С	С	С	С	С	С	С	С	С	С	С	C	С	Р
Р	Е	П	Е	Е	Е	Е	Е	Е	Е	Е	Е	П													
													0	0	0	0	0	0	0	0	0	0	0	0	Р
	SUMMED FOR EVEN PARITY (E)									SI	SUMMED FOR ODD PARITY (O)														


#### Note:

P: Parity (Even or Odd) Start Bit and Stop Bit

S: Site Bits from Card or Reader

C: Card Data

Wiegand Data Timing Specification Pulse Interval (TPW)=2.0mS +/- 5% Pulse Width (TDW)=100uS +/- 5%

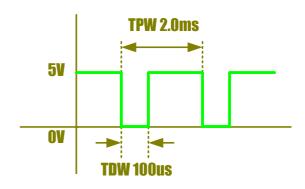

## Installation


For the installation, the inner reader requires two screws to be fixed on the proper location next to the entrance. The outer black housing will apply on top of the reader.



Please pay special attention to the below instruction which demonstrates the proper direction that outer housing needs to be applied to inner reader.



Above picture shows the inside of the outer housing.

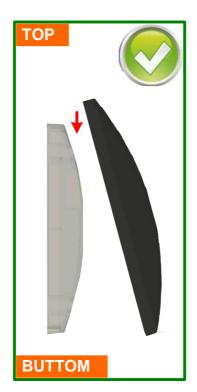



Above picture shows the correct direction (TOP) that outer housing needs to be applied.



## **CAUTION:**

The crossed out wheeled bin label that can be found on your product indicates that this product should not be disposed of via the normal household waste stream.

To prevent possible harm to the environment or human health please separate this product from other waste streams to en-sure that it can be recycled in an environmentally sound manner.

For more details on available collection facilities please contact your local government office or the retailer where you purchased this product.

This information only applies to customers in the European Union.

For other countries, please contact your local government to investigate the possibility of recycling your product.